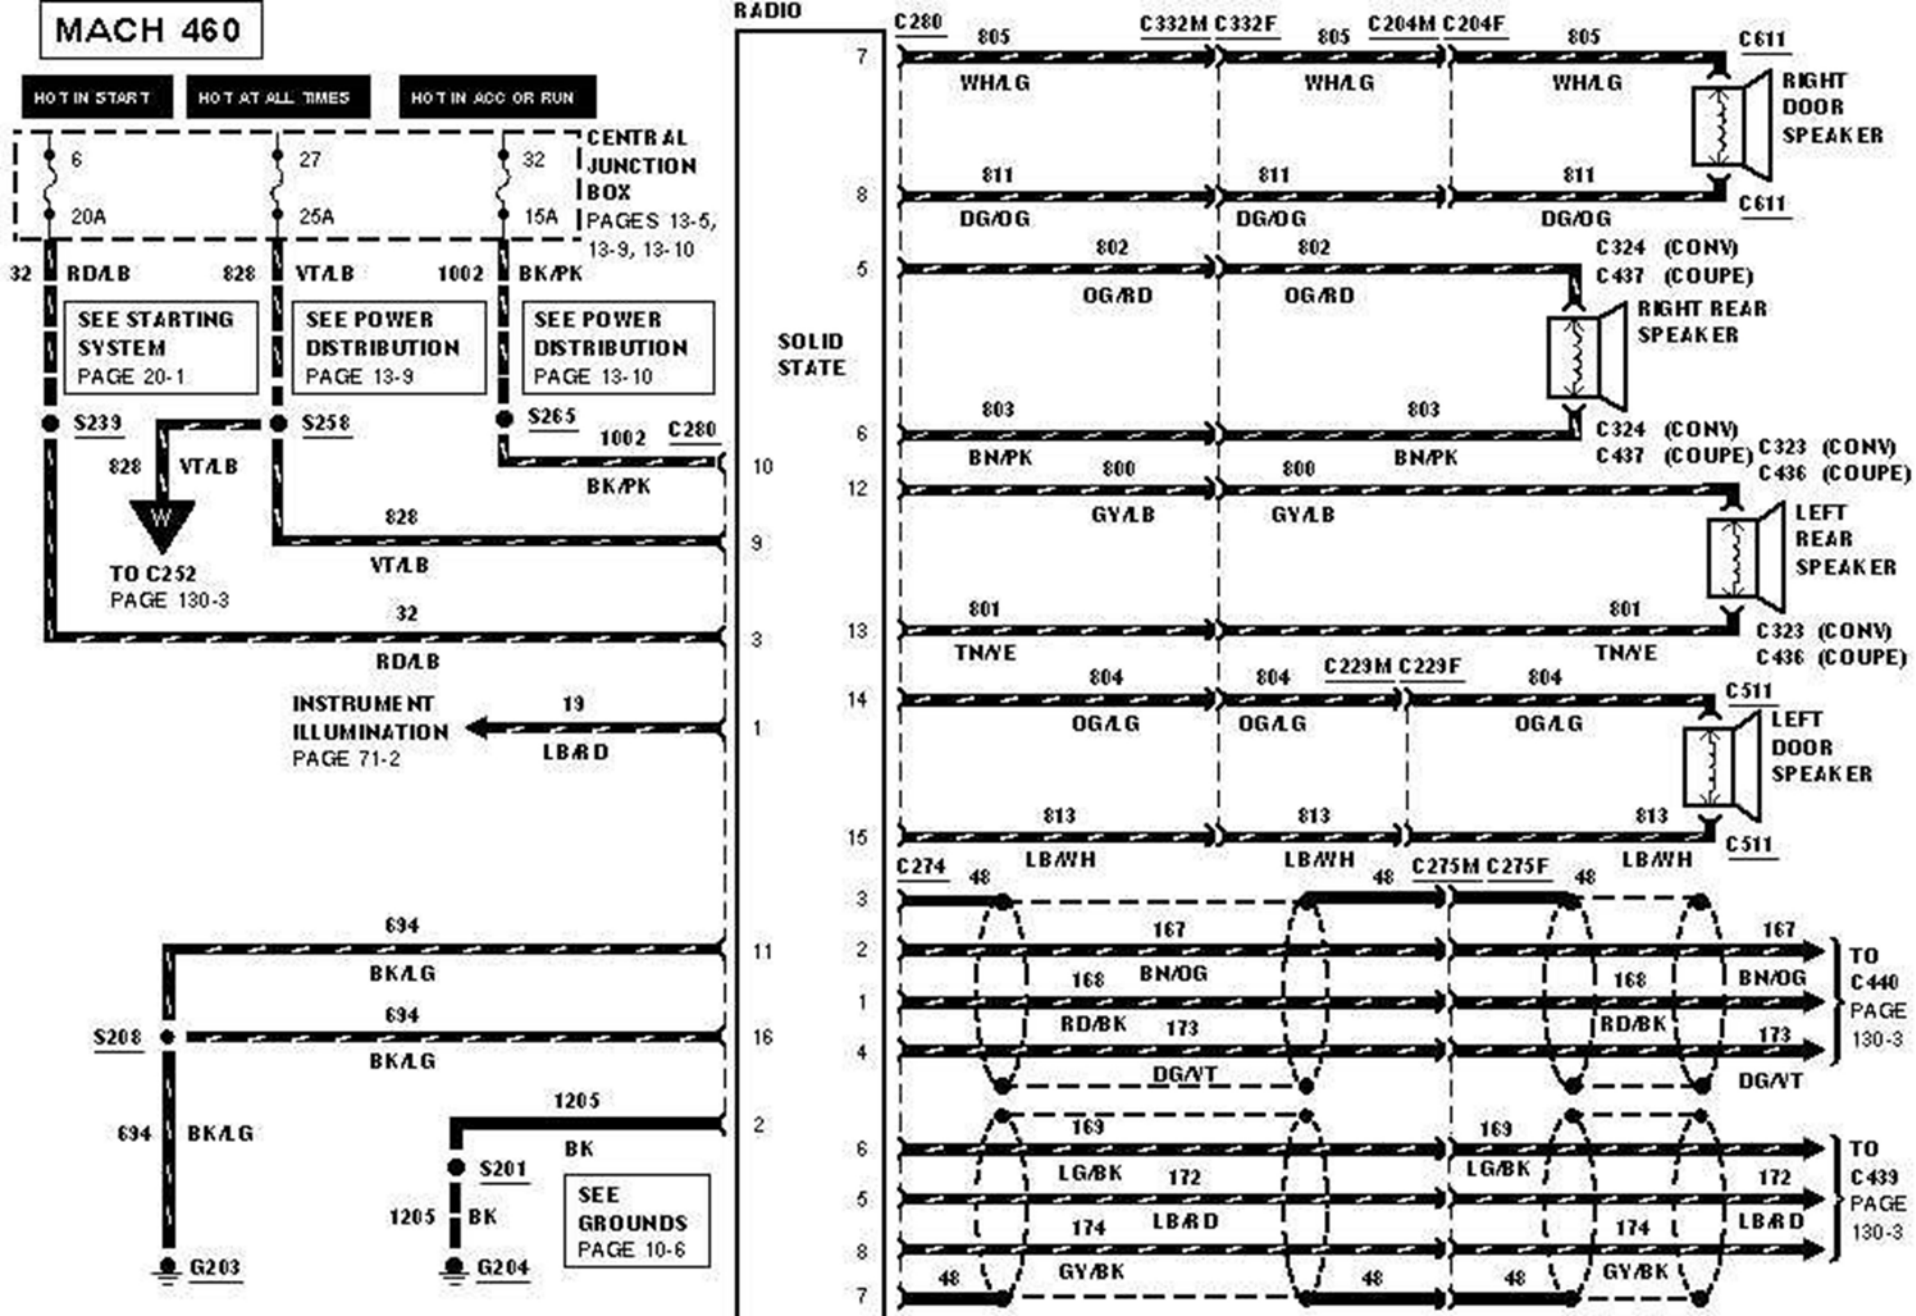
MACH 460
HOT IN START
HOT AT ALL TIMES
HOT IN ACC OR RUN
CENTRAL JUNCTION BOX
PAGES 13-5, 13-9, 13-10
6
20A
27
25A
32
15A
32 RD/LB
828
VT/LB
1002
BK/PK
SEE STARTING SYSTEM PAGE 20-1
SEE POWER DISTRIBUTION PAGE 13-9
SEE POWER DISTRIBUTION PAGE 13-10
S239
S258
S265
828 VT/LB
TO C252
PAGE 130-3
1002
C280
BK/PK
828
VT/LB
32
RD/LB
INSTRUMENT ILLUMINATION
PAGE 71-2
19
LB/RD
694
BK/LG
S208
694
BK/LG
694 BK/LG
1205
BK
S201
1205 BK
SEE GROUNDS PAGE 10-6
G203
G204
RADIO
SOLID STATE
7
8
5
6
10
12
9
13
3
14
1
15
11
16
2
C280
805
WH/LG
C332M C332F
805
WH/LG
C204M C204F
805
WH/LG
C611
RIGHT DOOR SPEAKER
811
DG/OG
811
DG/OG
811
DG/OG
C611
802
OG/RD
802
OG/RD
C324 (CONV)
C437 (COUPE)
RIGHT REAR SPEAKER
803
BN/PK
803
BN/PK
C324 (CONV)
C437 (COUPE)
C323 (CONV)
C436 (COUPE)
800
GY/LB
800
GY/LB
LEFT REAR SPEAKER
801
TN/YE
801
TN/YE
C323 (CONV)
C436 (COUPE)
804
OG/LG
804
OG/LG
C229M C229F
804
OG/LG
C511
LEFT DOOR SPEAKER
813
LB/WH
813
LB/WH
813
LB/WH
C511
C274
48
48
C275M C275F
48
3
2
1
4
167
168 BN/OG
RD/BK 173
DG/VT
167
168 BN/OG
RD/BK
173
DG/VT
TO C440 PAGE 130-3
6
5
8
7
169
LG/BK
172
174 LB/RD
GY/BK
48
48
48
169
LG/BK
172
174 LB/RD
GY/BK
TO C439 PAGE 130-3

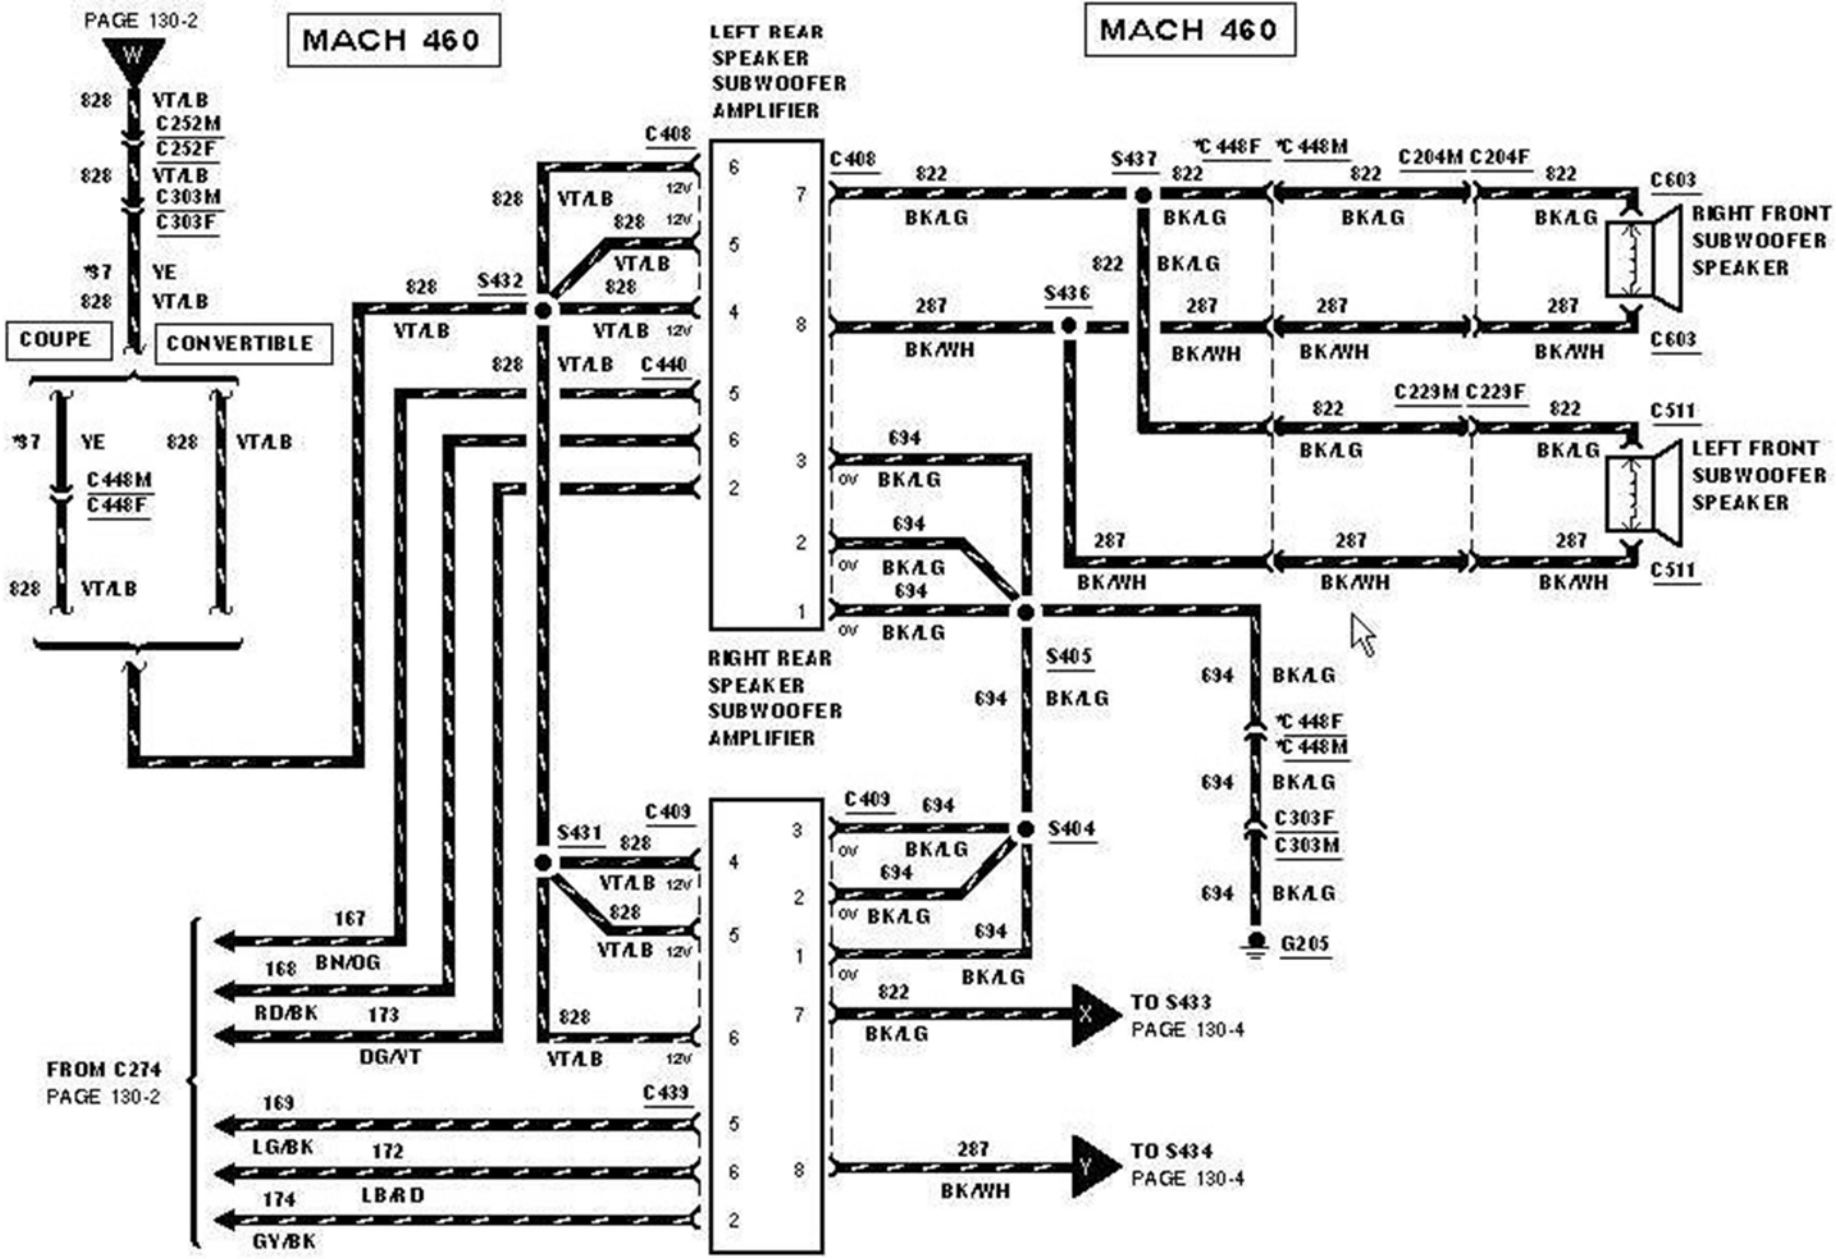
PAGE 130-2
MACH 460
MACH 460
LEFT REAR SPEAKER SUBWOOFER AMPLIFIER
RIGHT REAR SPEAKER SUBWOOFER AMPLIFIER
COUPE
CONVERTIBLE
RIGHT FRONT SUBWOOFER SPEAKER
LEFT FRONT SUBWOOFER SPEAKER
TO S433
PAGE 130-4
TO S434
PAGE 130-4
FROM C274
PAGE 130-2
G205

MACH 460

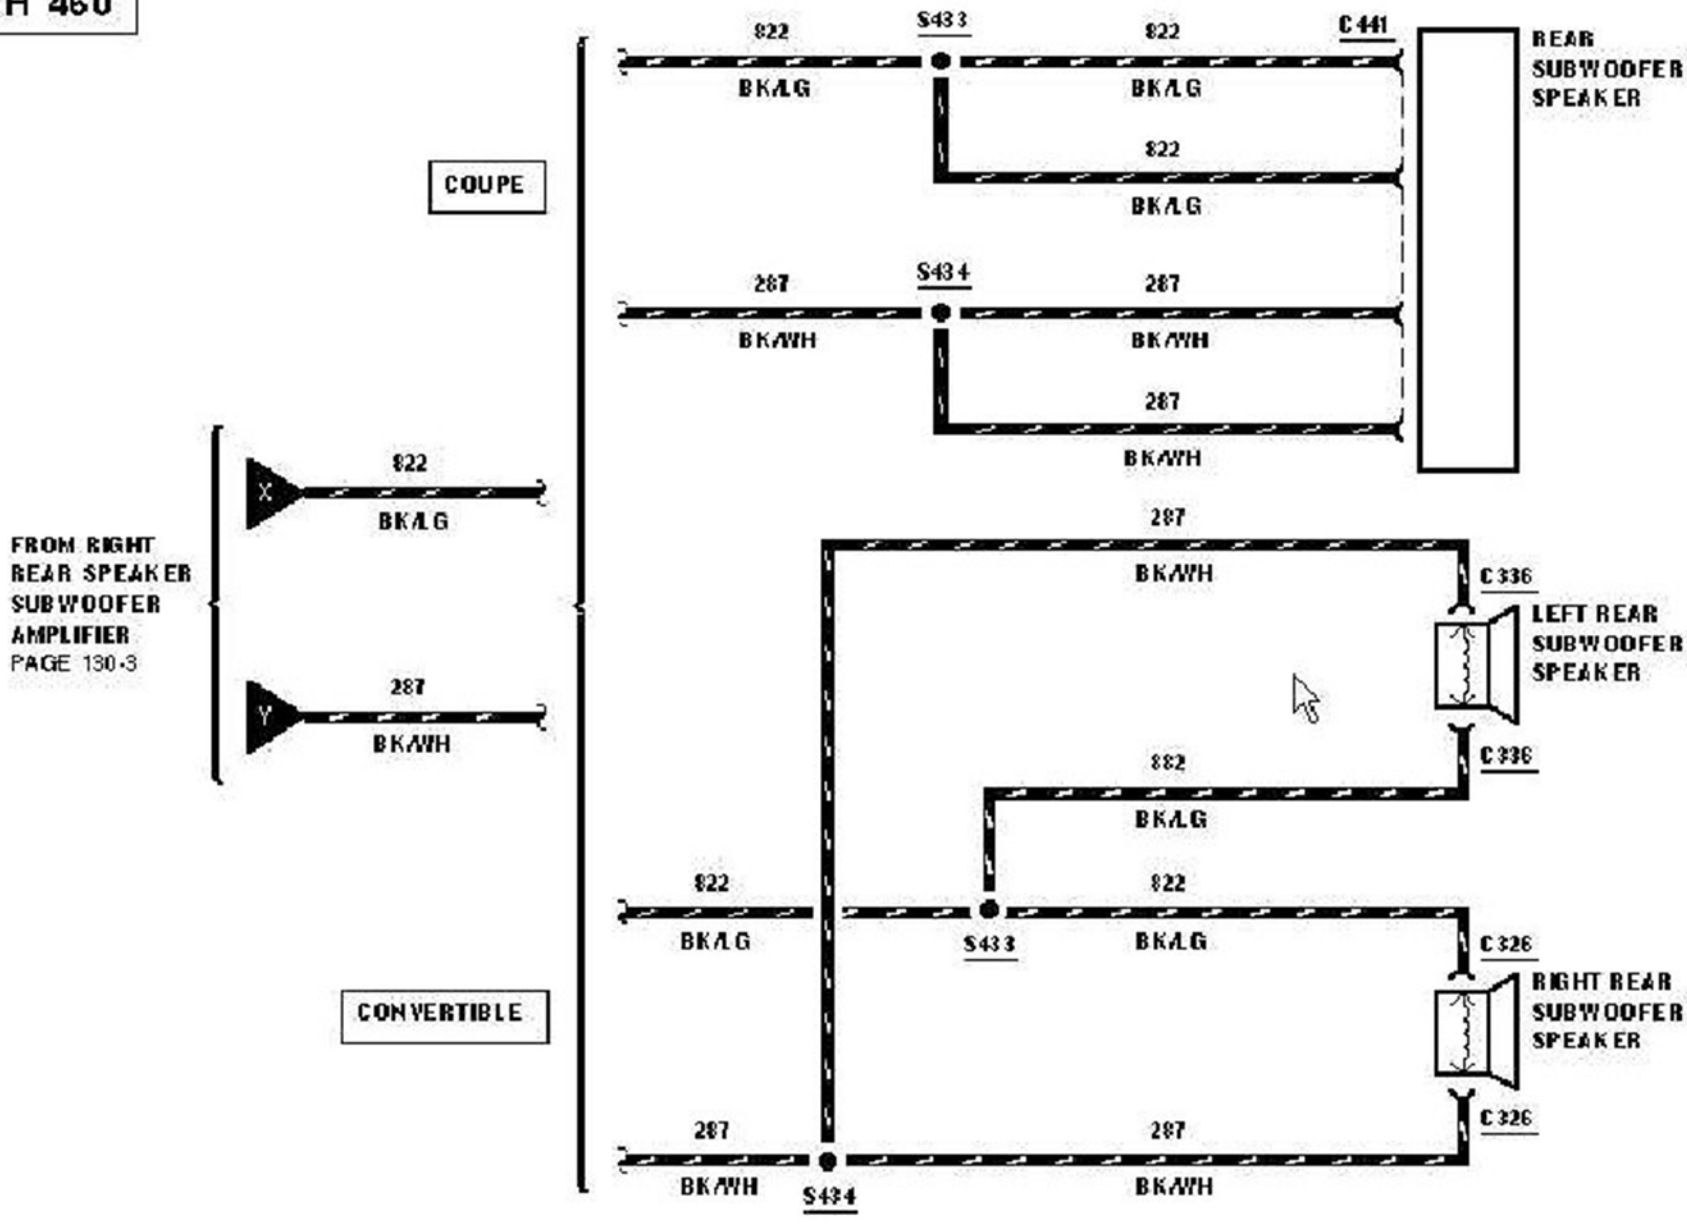
COUPE
822
BK/LG
S433
822
BK/LG
C441
REAR SUBWOOFER SPEAKER
822
BK/LG
287
BK/WH
S434
287
BK/WH
287
BK/WH
FROM RIGHT REAR SPEAKER SUBWOOFER AMPLIFIER
PAGE 130-3
X
822
BK/LG
Y
287
BK/WH
CONVERTIBLE
287
BK/WH
C336
LEFT REAR SUBWOOFER SPEAKER
C336
882
BK/LG
822
BK/LG
822
BK/LG
S433
C326
RIGHT REAR SUBWOOFER SPEAKER
C326
287
BK/WH
S434
287
BK/WH